
 
 
 

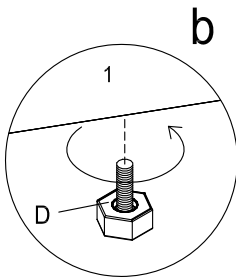
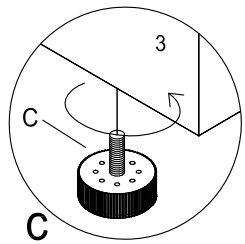
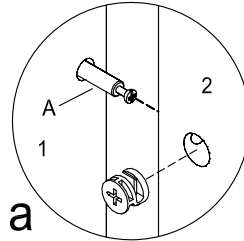
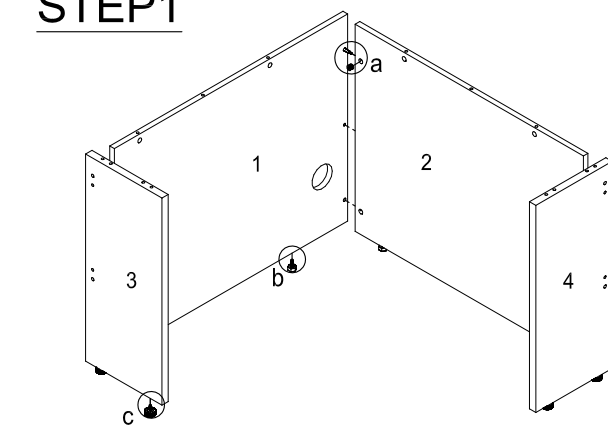


ASSEMBLY INSTRUCTIONS

MODEL NO.:CW759


A  14 (Ø 15x32) CAM LOCK	B  9 (Ø 8x30) DOWEL	C  4 (M8xH15) ADJUSTABLE GLIDE	D  4 (M6xH15) ADJUSTABLE GLIDE	E  2 (Ø 80) GROMMET
---	--	---	--	--

STEP1



IMPORTANT:


 
FUNCTION OF KLIX CAM





1/4 RIGHT
TURN FOR
LOCKING

MAKE SURE THE ARROW IS
POINTING UPWARDS
BEFORE INSERTING INTO
THE PANEL HOLE.

STEP2

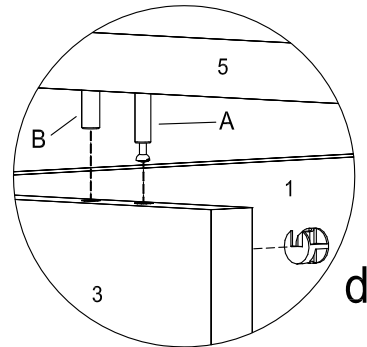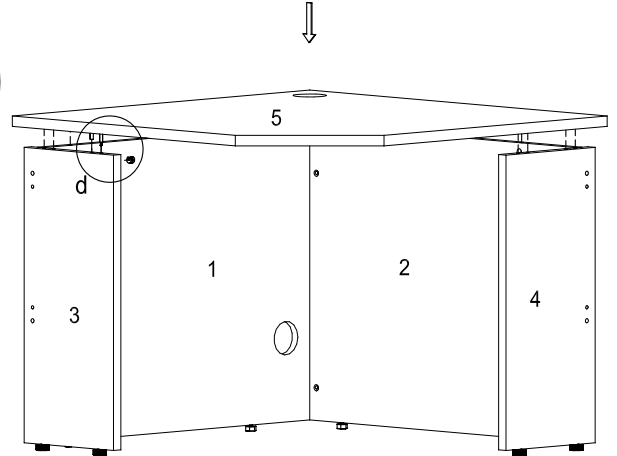

STEP3

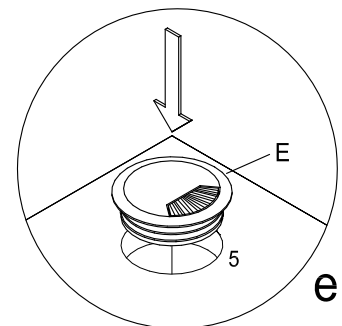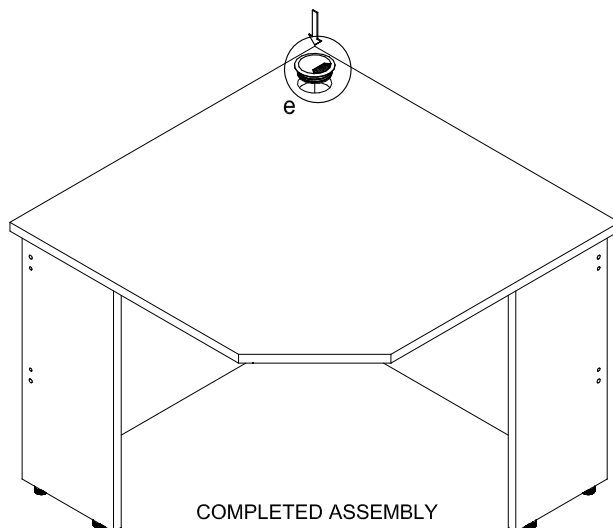

COMPLETED ASSEMBLY

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.
- It is recommended to require 2 persons to complete the assembly.